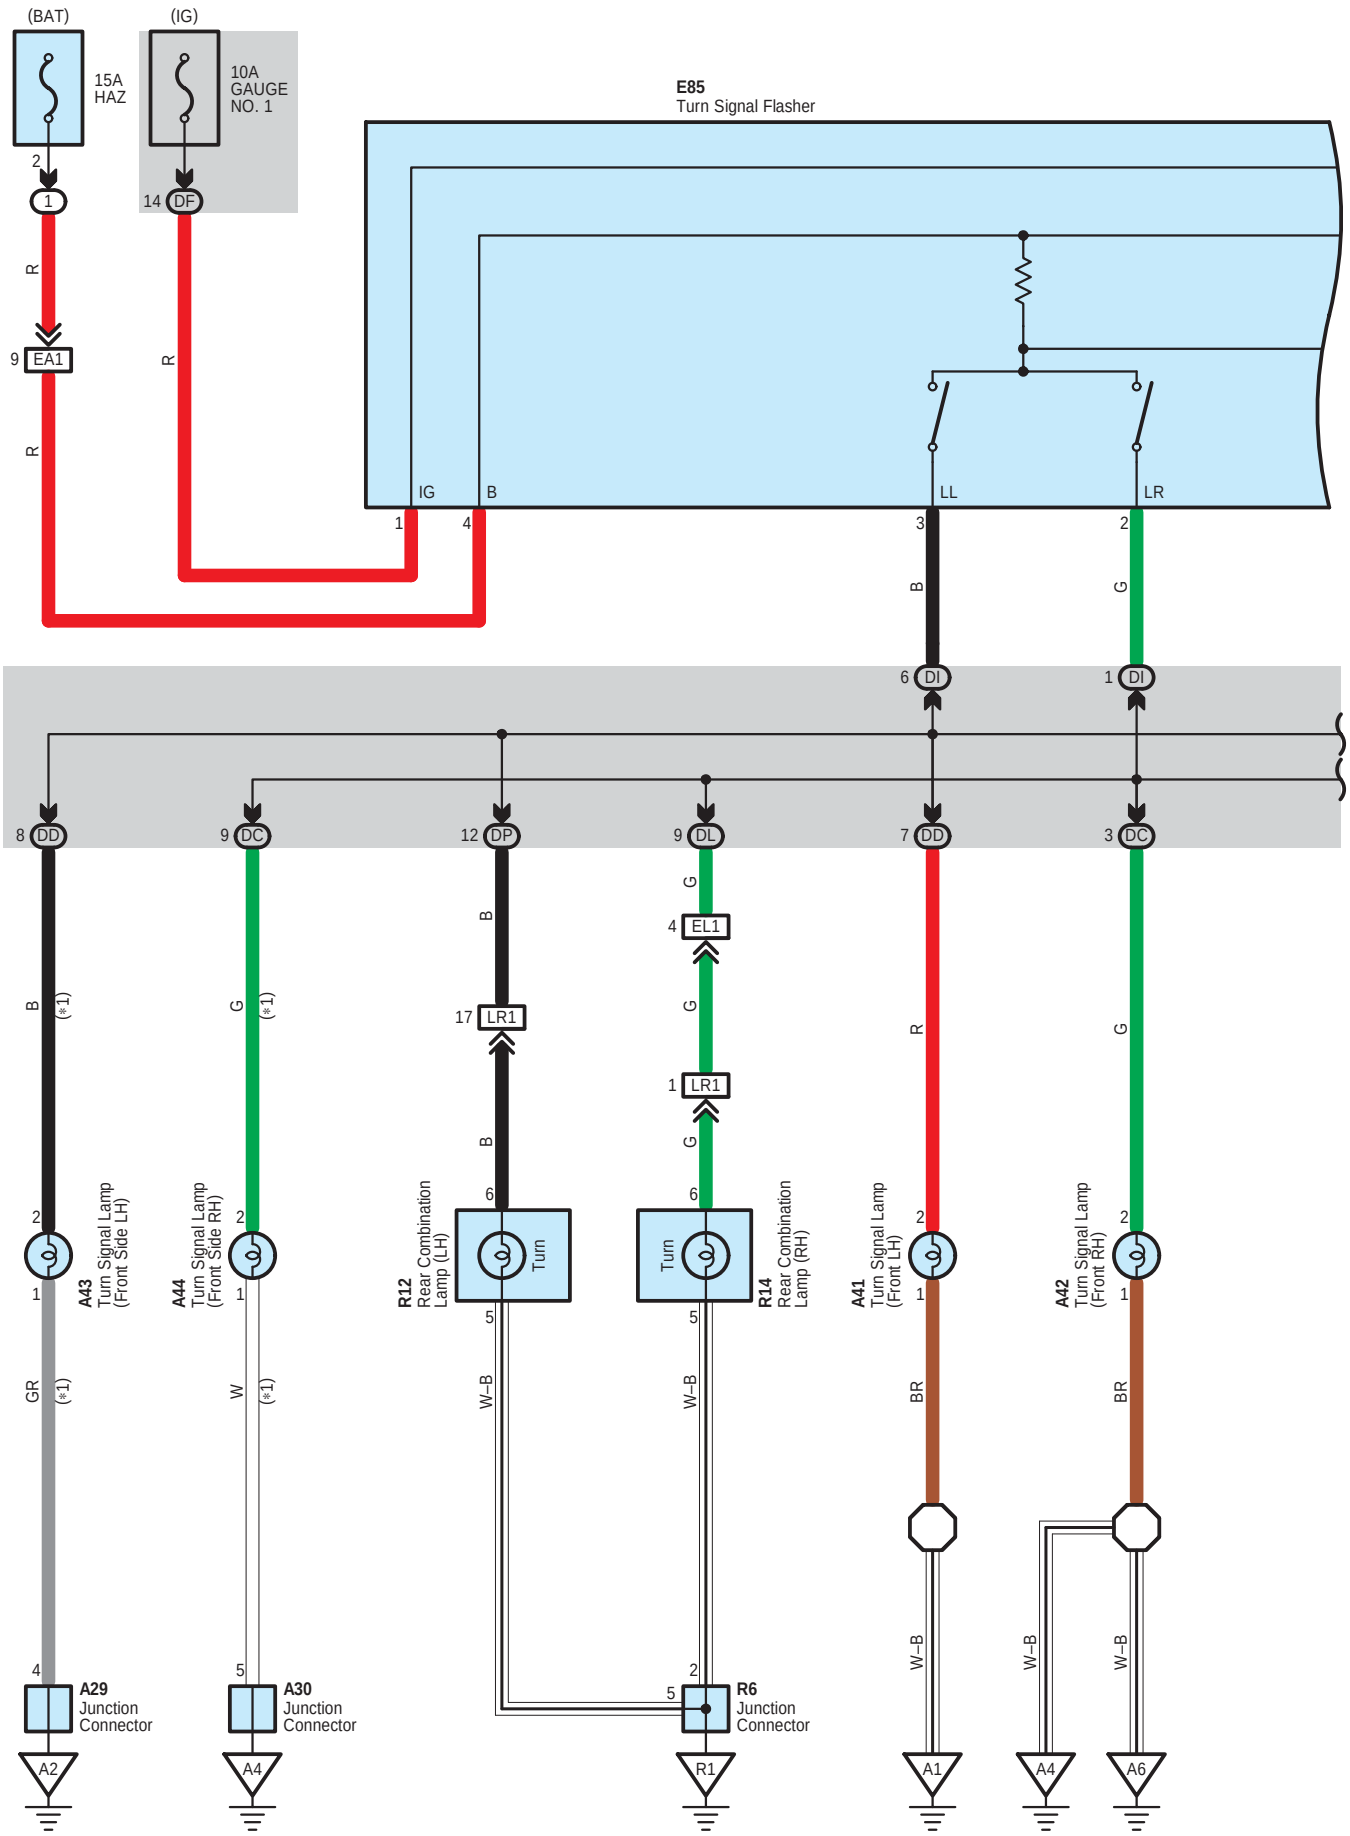
(BAT)
(IG)
15A
HAZ
10A
GAUGE
NO. 1
E85
Turn Signal Flasher
IG
B
LL
LR
EA1
DF
DI
DD
DC
DP
DL
EL1
LR1
A43
Turn Signal Lamp
(Front Side LH)
A44
Turn Signal Lamp
(Front Side RH)
R12
Rear Combination
Lamp (LH)
R14
Rear Combination
Lamp (RH)
Turn
A41
Turn Signal Lamp
(Front LH)
A42
Turn Signal Lamp
(Front RH)
A29
Junction
Connector
A30
Junction
Connector
R6
Junction
Connector
A2
A4
R1
A1
A6


∗ 1 : Korea, Taiwan
∗ 2 : w/ LEXUS Navigation System
∗ 3 : w/o LEXUS Navigation System
E85
Turn Signal Flasher
HAZ
E
ER
EL
8
7
6
5
W
L
R
11 3C
5 3U
6 3T
8 DG
2 DG
B
G
9 3E
10 3E
8 3P
10 3P
2 B
1 B
Turn LH
Turn RH
E19(A), E20(B)
Combination Meter
ES
E2
24 A
12 A
W–B
3 DM
10 DG
2 3S
2 3E
1 4G
3 4G
(∗2)
(∗3)
HAZ
Hazard SW
GND1
E62
Multi–Display
TB
Hazard SW
GND
E3
A/C Control Assembly
10
18
4 3C
2 3C
12 3T
11 3S
5 3P
13
15
Turn Signal SW
TR
EL
TL
LH
N
RH
E27
Headlamp Dimmer
SW Assembly
12
5
E37
Junction
Connector
E1
E4
E2

Turn Signal and Hazard Warning Light

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A29	54	E3	58	E85	59
A30	54	E19 A	58	R6	65
A41	55	E20 B	58	R12	65
A42	55	E27	58	R14	65
A43	55	E37	58		
A44	55	E62	59		

: Relay Blocks

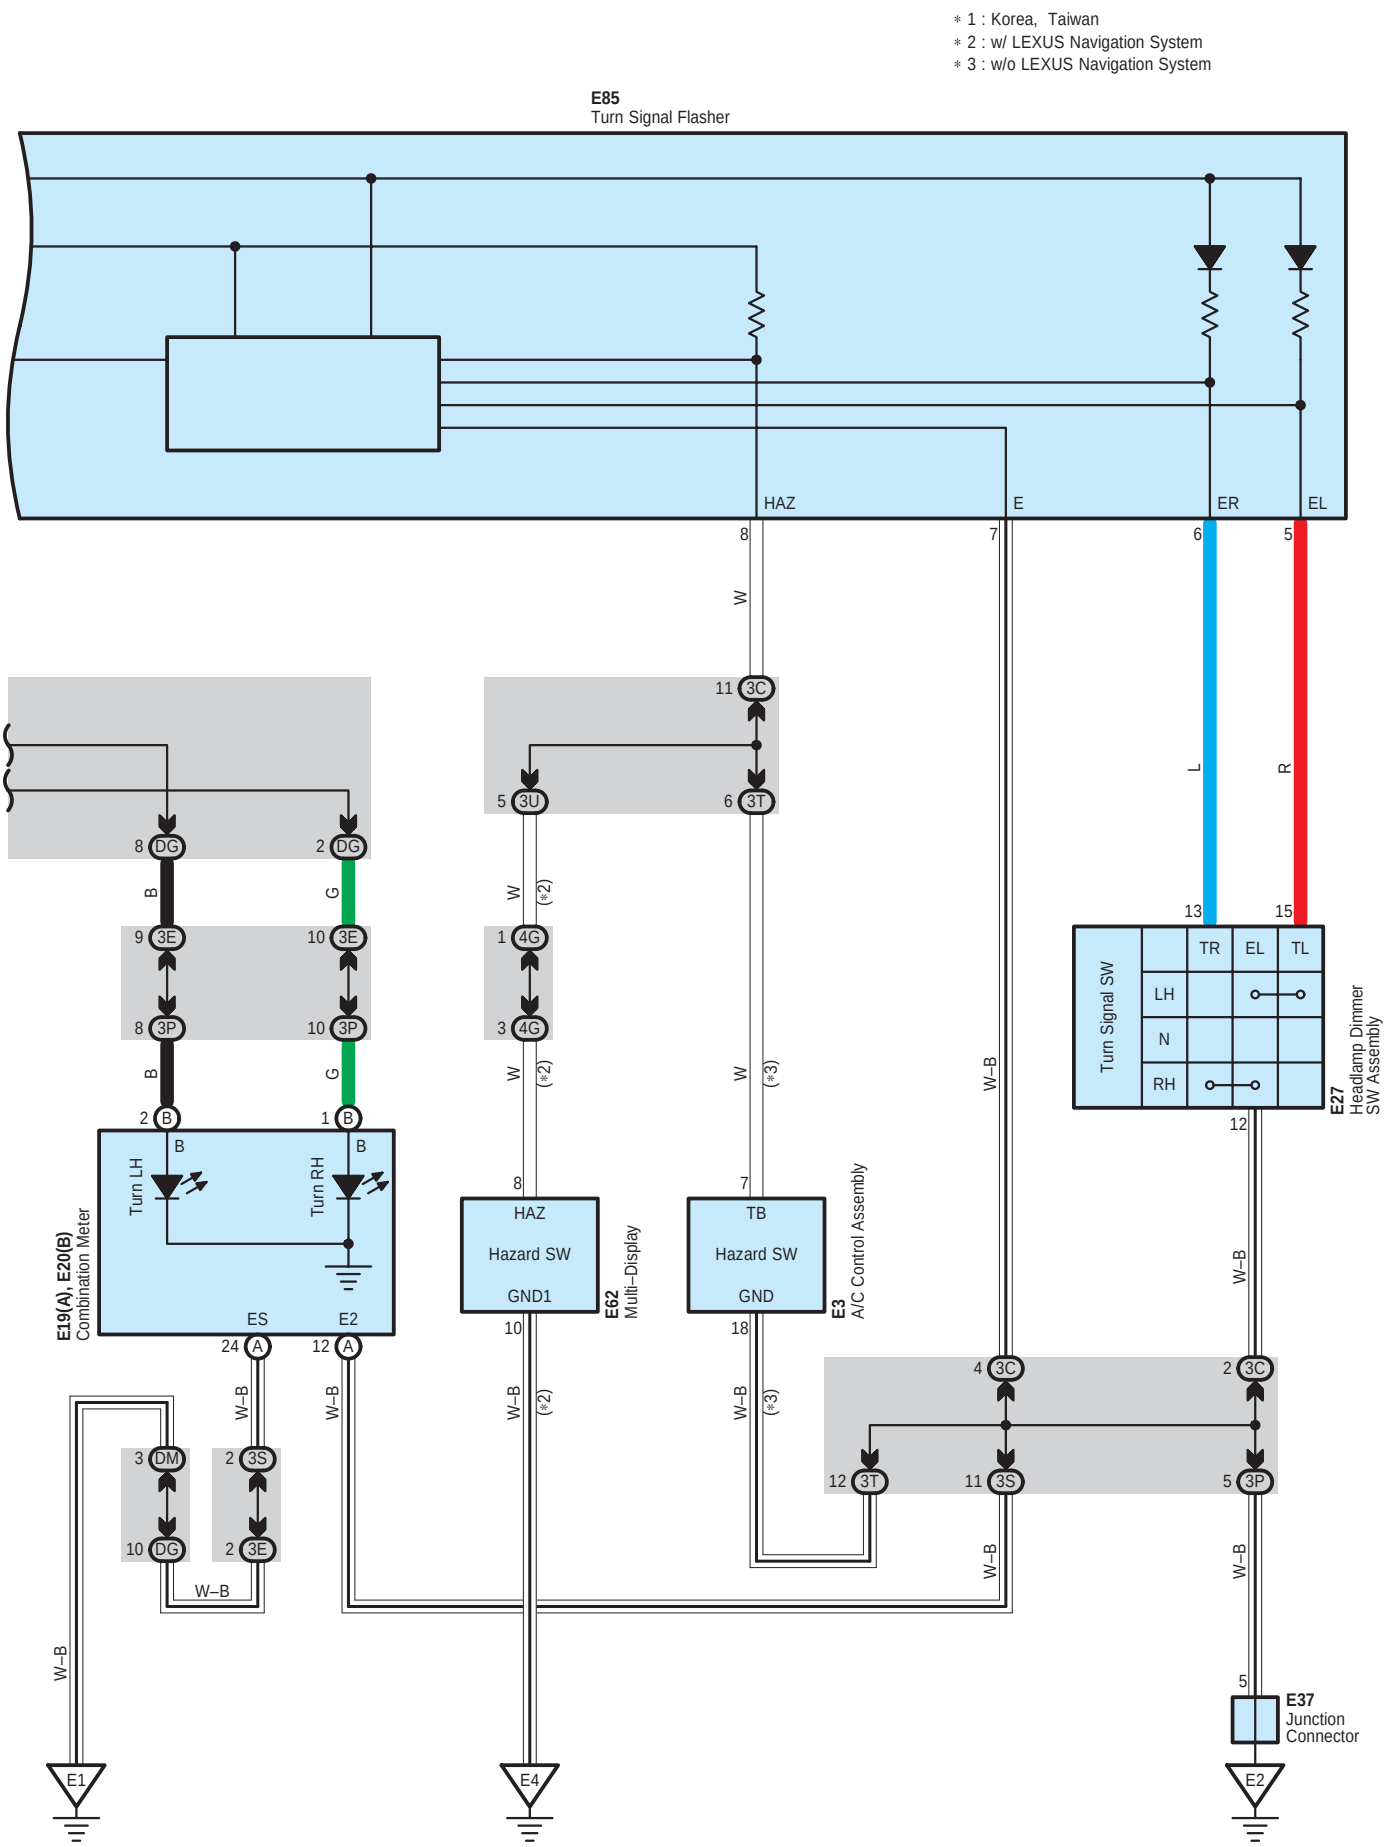Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3C	36	Instrument Panel Wire and J/B No.3 (Instrument Panel Left)
3E		
3P		
3S		
3T		
3U		
4G	42	Instrument Panel Wire and J/B No.4 (Instrument Panel Right)
DC	30	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
DD		
DF	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
DG	31	
DI		
DL	30	
DM		
DP	30	Floor Wire and Instrument Panel J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	69	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
EL1	69	Instrument Panel Wire and Floor Wire (Left Kick Panel)
LR1	70	Floor Wire and Luggage Room Wire (Roof Side Rear Inner Panel LH)

: Ground Points

Code	See Page	Ground Points Location
A1	68	Front Left Fender Apron
A2		
A4	68	Front Right Fender Apron
A6	69	Cowl Side Right
E1	69	Left Side of the Instrument Panel Reinforcement
E2	69	Instrument Panel Brace LH
E4	69	Instrument Panel Brace RH
R1	70	Roof Side Rear Inner Panel LH